




GREENLUX®

the power of light...

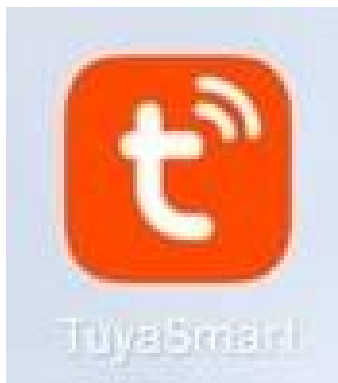

WiFi 4SOC 4USB

GXSH022

WiFi 4SOC SCHUKO 4USB

GXSH023

WiFi SOC S

GXSH026

WiFi SOC SCHUKO S

GXSH027

User ▾



Welcome Home

Set your home location for more information >

Add Device

All Devices Tap + to add a smart device. ...

Got It



No devices

Add Device



Home



Smart



Me



Electrician

Socket

Lighting



Socket
(Wi-Fi)



Socket
(ZigBee)



Socket
(BLE)

Large Home Ap...



Socket
(NB)



Socket
(other)

Small Home Ap...

Kitchen Appliances

Power Strip

Security & Sensors



Power Strip
(Wi-Fi)



Power Strip
(ZigBee)



Power Strip
(other)

Exercise & Health

Switch

Video Surveillance



Switch
(Wi-Fi)



Switch
(ZigBee)



Switch
(GPRS)

Gateway Control

Energy



You are advised to enable Bluetooth.
Enable Bluetooth to add some Wi-Fi device...



Cancel

Select 2.4 GHz Wi-Fi Network and enter password.

If your Wi-Fi is 5GHz, please set it to be 2.4GHz. [Common router setting method](#)



 2.4GHz



 5GHz



Greenlux_free



.....



Next



Cancel

EZ Mode 


Reset the device



Power on the device after it has been powered off for 10s.

[Back](#)[Next](#)

Cancel

EZ Mode 

Reset the device



Press and hold the reset button for 5s until the indicator blinks.

[Back](#)[Next](#)

Cancel

EZ Mode 

Reset the device



As shown in the following figure, the indicator blinks three times per second.

Confirm indicator rapidly blink

Back

Next



Cancel

Adding device...

Ensure that the Wi-Fi signal is good.



3%



Scan
devices.



Register on
Cloud.



Initialize the
device.



Cancel

Added successfully



Soc

Device added successfully



Salon

Done






Welcome Home

Set your home location for more information >

All Devices

Salon



 Soc



Home



Smart



Me

